

Soundpod Wiring Instructions



Soundpod

- Connect the black cable to the Com connector.
- Connect the red cable to the 8 Ohm connector.

When using with a PC

- Connect the phono to Aux red and white.

When using with a CD / DVD player

- Connect the phono to the CD L & R connectors.
- Use the selector switch to select between Aux and CD.



Volume controls

- Aux. CD should never be set too high as this will cause sound distortion.

Please note, each Soundpod is 20 watts RMS and should not be overpowered.